

1. Clean / Backflush the Pool Filter. (Picture 1 on BACK)
2. Firmly connect the Female-Female Connector 2 - 3 Hoses from the pool cleaner , **Wider part** to the Gator. Connect pool hose inside the smaller side.
3. Check the **Flow direction** and Gator Flow ARROWS.
4. At the pool pump, close the Main Drain, decrease wall Skimmer suction, and **increase** suction to the Suction port connected to Gator AutoSkim. (ON BACK)
5. With one Hose connected, Check the Flow meter (included with Gator Skim)
 - a-b: Add white spacers (this is optimal operation)
 - c: Do not place White spacers.
 - d: Inadequate flow, check pump, filter, suction leak.
6. Adjust the Gator Bottom Valve to balance Gator vs suction cleaner suction
7. If suction comes from the Wall Skimmer, replace any regulator valve with Gator supplied Connector (check instructions)

Need more TIPS? Check the Instructions & IN CASE OF TROUBLE GUIDE.

NEED help? Contact us Support@OnlyAboutInnovation.com

Phone: 1-866-875-4607



Warning: Always turn off the pool Pump BEFORE connecting the SkimmerMotion and the Suction cleaner



