GATOR AUTOSKIM

IN CASE OF TROUBLE

SYMPTOM	PROBABLE CAUSE	REMEDY
GATOR Sluggish or inactive	Regulator valve inside the wall Skimmer	If pool hose is connected to a wall Skimmer: Replace Regulator valve with GATOR Male-Male Connector inside the Wall Skimmer
	Pool Filter Clogged	Clean Pool Filter Clean debris in your Pump basket or corrugated Hose.
	GATOR tension Plate setting	Set tension plate setting toward low
	Water Flow direction though GATOR is not right	Check the water flow direction though GATOR
Zodiac Adapter Hose Disconnect from GATOR	Zodiac Hoses hard plastic connector slip from GATOR Connector	Add few turn of Teflon tape to the GATOR connector to increase holding
Automatic Pool Cleaner moves in a fixed pattern	Pool hose related problem	Adjust the return outlets (water Jets) to te bottom of the pool. Ensure hose length is appropriated (Check Cleaner manual)

Customer Support: Support@OnlyAboutInnovation.com - CALL 1-866-875-4607 x 0

Check Blog & Support for more information: www.SkimerMotion.com

GATOR AUTOSKIM

IN CASE OF TROUBLE

SYMPTOM	PROBABLE CAUSE	REMEDY	
Automatic Pool cleaner hose curls up or tangles around GATOR	GATOR too close to the Suction cleaner	Move GATOR 1 or 2 hoses sections closer to the pool Pump.	
	Hose twisted	Ensure the hose are not twisted when attaching the GATOR	
Automatic Pool cleaner not holding to the ground or FLOATS	Loose hose connection.	Connect firmly the GATOR Female-Female connection & check all the hoses are tight. Add TFLON tape to tight the connection for Zodiac pool cleaner hoses	
	GATOR tension Plate setting	Increase tension plate setting to low or add white spacers	
	System vacuum not enough	Increase the suction power of your system. Increasing the valve that control the suction line (located near the pool Pump). At the pool pump, close the Main Drain, decrease wall Skimmer suction, increase suction to the Suction port connected to GATOR AutoSkim.	
GATOR rises up out of water and takes air	GATOR tension Plate setting	Move tension plate setting to High or add white spacers	
	Inner Cylinder does not move easily in relation to outher cylinder	Check free movement, clean cylinder, check Slide stop rivet (GA8)	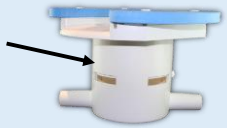

Customer Support: Support@OnlyAboutInnovation.com - CALL 1-866-875-4607 x 0